

Twin Pack Table Tennis

USER'S GUIDE



dreamGEAR
www.dreamgear.net

PACKAGE CONTENTS:

- (2) Table Tennis Paddles
- User's Guide/Warranty Card
- Registration Card

HOW TO SET-UP THE TABLE TENNIS PADDLE:

1. Be sure that the Wii Remote is inside of the original Wii Remote Jacket.
2. Insert the Wii Remote with jacket into the Table Tennis Paddle.

NOTE: You can insert the Wii Remote into the Table Tennis Paddle with or without the Wii MotionPlus attachment.

3. Attach the elastic remote strap across the Wii Remote by placing the strap on the designated tabs located on both sides of the Table Tennis Paddle. The strap should fit between the directional button and the A button on the Wii Remote.
4. To remove the Wii Remote from the Table Tennis Paddle, detach the elastic strap from the tabs on both sides of the Table Tennis Paddle. Remove the Wii Remote from the Table Tennis Paddle.

NOTE: Use the IR Port on the Table Tennis Paddle to navigate through the menus. The Wii Remote can remain inside the Table Tennis Paddle while navigating through the menus.

NOTE: Always practice safety first. Be sure the Wii Remote is attached properly and securely to the paddle. Be aware of your surroundings and stay a safe distance from all objects. **DO NOT** ever swing the Wii Remote at anyone or anything.

DISCLAIMER: dreamGEAR is NOT liable for any direct, indirect, punitive, incidental, special, consequential damages, or any damages whatsoever arising out of or connected with the use or misuse of this product.

dreamGEAR
www.dreamgear.net

FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or support@dreamgear.net